

55381

DODGE DAKOTA
DODGE DURANGO
DODGE RAM PICKUP
DODGE RAM, VAN
DODGE SPRINTER
JEEP GRAND CHEROKEE

WIRING LOCATION GUIDE GUÍA DE UBICACIÓN DEL CABLEADO IDE D'EMPLACEMENT DES FILS



MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.


¡DEBE LEERSE PRIMERO!

Debe seguirse todos los pasos para asegurar el correcto funcionamiento del Conector-T. Para verificar la correcta instalación, pruebe conectando una luz de prueba o un remolque debidamente cableado.

À LIRE D'ABORD!

Pour assurer le bon fonctionnement du T-Connector, il faut suivre toutes les étapes. Pour vérifier que l'installation a été bien effectuée, branchez un feu de test ou une remorque correctement filée.

10/29/08

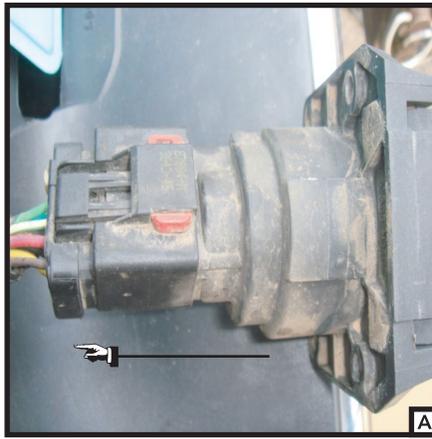

English

1. Locate the tow vehicle's trailer harness connector. This harness is located under the vehicle, behind the bumper, on the drivers side of the vehicle. The harness will have a connector similar to that of the T-connector.
2. For easeness of install, unfasten the 7-way connector from it's mounting bracket by removing the mounting screws or bolts.
3. Seperate the 7-way connector from the vehicle's wiring harness by carefully pressing the red locking tab sideways and pulling apart. Once apart check to see that the mating surfaces of the connectors are free of dirt. Clean if necessary. **[A]**
4. Position the T-connector between the vehicle harness and the 7-way connector. Firmly press the ends together until the locking tabs are engaged. Push the red locking tabs back to their original position. **[B]**
5. Reinstall the screws or bolts and test the installation with a test light or trailer.

WARNING!

Very miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage to vehicle and/or personal injury

Español

Français



55381